



ORPHEUS THREE

USER MANUAL



INTRODUCTION

CONTENTS

- Introduction.....2
- Front panel description.....3
- Rear panel description - Mono.....4
- Rear panel description - Stereo.....5
- Connections - Mono.....6
- Connections - Stereo.....7
- Operations.....8

UNPACKING

First check and identify the contents of your Orpheus Three package, as listed below :

- Orpheus Three power amplifier
- Power cord
- Orpheus Three user manual
- Warranty registration card

If any item should be damaged or missing, please inform your supplier without delay.

Keep the packing materials, you may need it to transport the unit in the future.


READ THIS BEFORE OPERATING YOUR UNIT

- Please read this manual carefully, to assure proper operation and the best possible performance.
- Switch off the unit before connecting or disconnecting any input or output wire.
- Do not touch the inner pins of rear-panel connectors, electrostatic discharge may cause permanent damage to the unit.
- Choose the installation location for the unit carefully. Avoid placing it in direct sunlight or close to a source of heat. Avoid also locations subject to vibration and excessive dust, heat, cold or moisture.
- To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture.
- Do not use force when operating switches, knobs and other controls.
- Do not open the chassis or attempt to make repairs by yourself, as this may result in damage to the unit or electrical shock. If a foreign object should get into the unit, contact your local dealer.
- When planning not to use the unit for a long period of time, it is advisable to disconnect the power plug from the wall outlet.
- The power switch does not disconnect the complete unit from the main line.
- To prevent lightning damage, disconnect the power plug when there is an electrical storm.
- When moving the unit, be sure to first disconnect

nect the power plug and all wires connected from the unit to other equipment.

- When disconnecting the power plug from the wall outlet, always pull directly on the plug, never pull the cord itself.
- Do not attempt to clean this unit with water or chemical solvents, as this may damage the unit or the finish. Use a clean, dry cloth.
- Keep this manual in a safe place for future reference.

FRONT PANEL

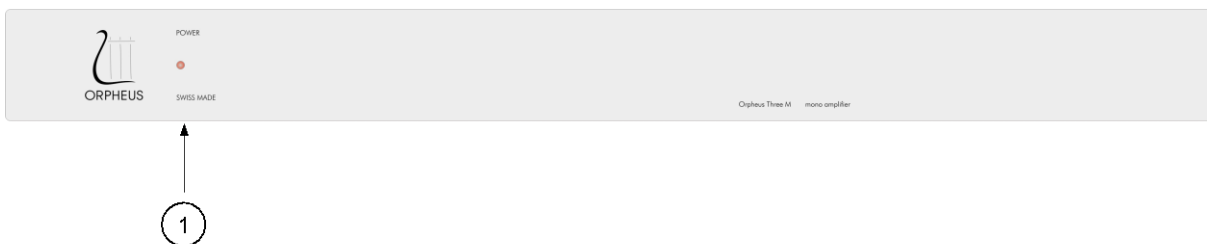


1. MAIN POWER INDICATOR

Lights red when the unit is switched on and operating.

Blinks red during the self-test procedure (approximately 2 seconds) after switching on the unit.


Indicator light is off when the unit is switched off.

REAR PANEL - MONO

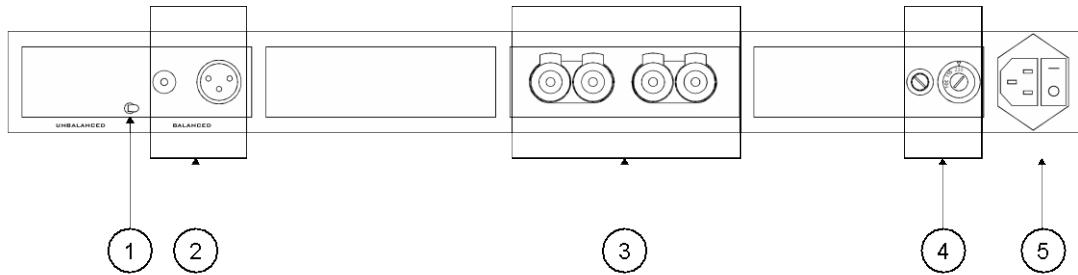


1. INPUT SELECTOR SWITCH
Press the switch either to the left to select the unbalanced input or to the right to select the balanced input.
2. INPUT
Balanced and unbalanced input connectors.
3. OUTPUT
Dual output connectors in parallel.
4. INPUT VOLTAGE SELECTOR & FUSE RECEPTACLE
The input voltage selector switch configures the unit to the line voltage of the country where it is used.
The main fuse is located in the fuse receptacle. If it has to be changed, replace it by a T5A slow-blow fuse.
5. POWER SUPPLY & POWER SWITCH
Power cord connection and main power switch.

REAR PANEL - STEREO

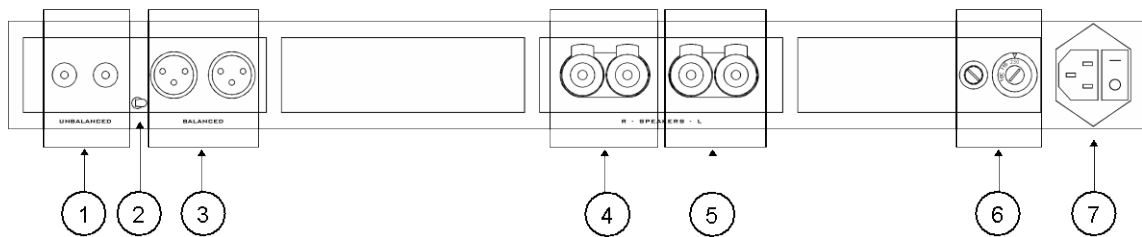

1. UNBALANCED INPUT
Unbalanced input connectors.
2. INPUT SELECTOR SWITCH
Press the switch either to the left to select the unbalanced input or to the right to select the balanced input.
3. BALANCED INPUT
Balanced input connectors.
4. OUTPUT RIGHT
Right channel output connectors.
5. OUTPUT LEFT
Left channel output connectors.
6. INPUT VOLTAGE SELECTOR & FUSE RECEPTACLE
The input voltage selector switch configures the unit to the line voltage of the country where it is used.
The main fuse is located in the fuse receptacle. If it has to be changed, replace it by a T5A slow-blow fuse.
7. POWER SUPPLY & POWER SWITCH
Power cord connection and main power switch.


CONNECTIONS - MONO

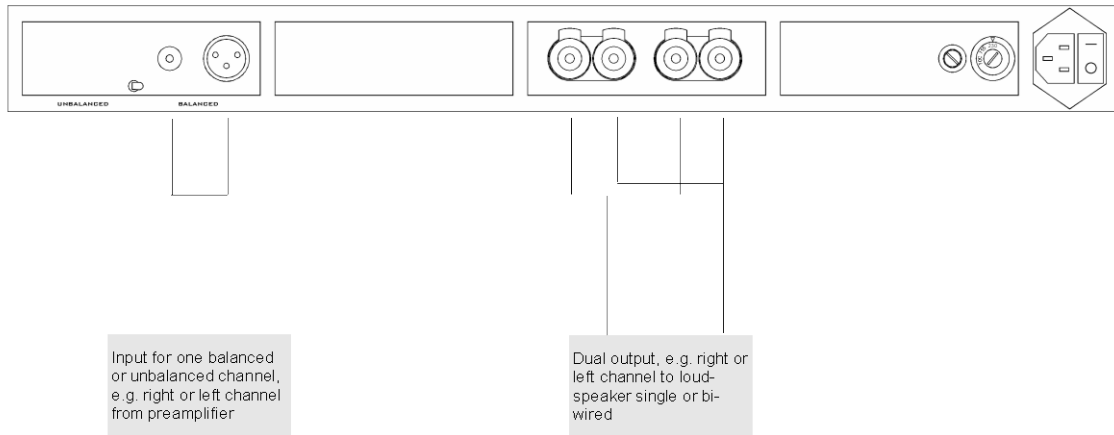

ORPHEUS THREE

1

CONNECTIONS - STEREO

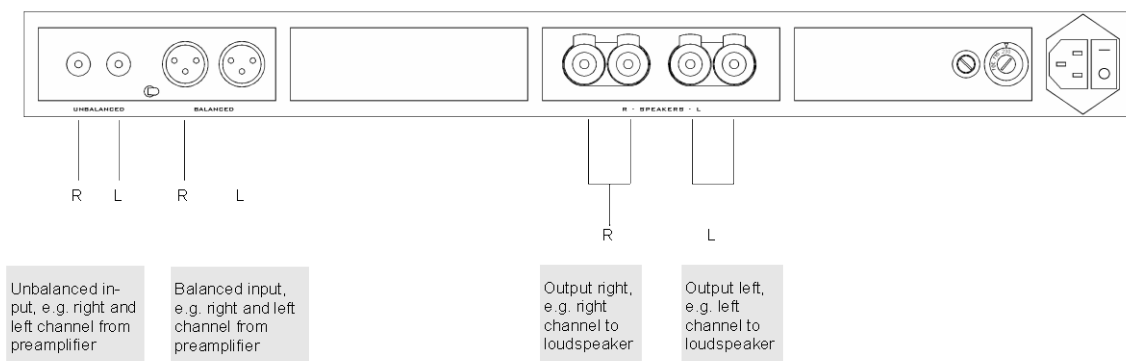

R : right channel
L : left channel

ORPHEUS THREE

1

OPERATIONS/ SPECIFICATIONS

QUICK GUIDE

CONNECTION

Connect the input cable from the preamplifier first, followed by the output cable to the loudspeakers, and finally the power cord.

INPUT FORMAT

Select either the unbalanced input on RCA connector or the balanced input on XLR connector by flipping the switch left or right respectively.

POWER ON

Flip the main power switch at the back of the unit from 0 to I.

The main power indicator on the front panel will light red and then green when ready for operation.

TECHNICAL DATA - ORPHEUS THREE M

Max Power : 150 W RMS

Sensitivity : 1 V RMS for an 8Ω load

Voltage gain
+ 39.70 or + 32.00 dB @ 16Ω load
+ 34.40 or + 30.70 dB @ 8Ω load
+ 27.10 or + 28.70 dB @ 4Ω load
+ 17.20 or + 24.70 dB @ 2Ω load

Measure reference : 1W in an 8Ω load = 0dB

THD+N @ 0dB : 0.007%
THD+N @ -30dB : 0.070%
THD+N @ -60dB : 1.700%
Dynamic range : 95dB
Signal/noise ratio : 95dB
Residual noise : 46μV RMS (A-weighted)

Measure reference : 30W in a 4Ω load = 0 dB

THD+N @ 0dB : 0.006%
THD+N @ -30dB : 0.016%
THD+N @ -60dB : 0.350%
Dynamic range : 109dB
Signal/noise ratio : 109dB
Residual noise : 38μV RMS (A-weighted)

Idle Power from main: 27 W RMS

Max Power from main: 350 W RMS

TECHNICAL DATA - ORPHEUS THREE S

Max Power : 40 W RMS

Sensitivity : 550 mV RMS @ 40 W output @ 8Ω

Voltage gain
+ 39.50 or + 31.90 dB @ 16Ω load
+ 34.40 or + 30.70 dB @ 8Ω load
+ 27.30 or + 28.70 dB @ 4Ω load
+ 17.40 or + 24.80 dB @ 2Ω load

Measure reference : 1W in an 8Ω load = 0dB

THD+N @ 0dB : 0.029%
THD+N @ -30dB : 0.110%
THD+N @ -60dB : 2.700%
Dynamic range : 91dB
Signal/noise ratio : 91dB
Residual noise : 80μV RMS (A-weighted)

Measure reference : 30W in a 4Ω load = 0 dB

THD+N @ 0dB : 0.006%
THD+N @ -30dB : 0.066%
THD+N @ -60dB : 0.570%
Dynamic range : 105dB
Signal/noise ratio : 105dB
Residual noise : 62μV RMS (A-weighted)

Idle Power from main: 15 W RMS

Max Power from main: 350 W RMS

ORPHEUS THREE

1

OPERATIONS

COMMENTS

Constructive feedback is always welcome.

Please feel free to forward us your comments at the address listed below or to your local dealer or distributor.

TECHNOLOGY & DESIGN

The unit has been entirely manufactured and assembled in Switzerland; conceived by ANAGRAM Technologies SA and designed by Chiarini Design.

IMPORTANT NOTICE

Orpheus Laboratories Sàrl reserve the right to make changes to their products or discontinue any product or service without notice. Adequate operating safeguards must be used to minimize hazards. Reproduction of user manual information is permissible only if it is without alteration and is accompanied by all relevant conditions, limitations and notices. Source must be clearly identified when reproducing user manual information.

ADDRESS

ORPHEUS Laboratories Sàrl
ZI le Trésé 6A
1028 Préverenges
Switzerland

+41 21 804 19 80 phone

+41 21 804 19 81 fax

info@orpheuslab.com

www.orpheuslab.com

DEALER/DISTRIBUTOR

© Orpheus Laboratories Sàrl - 2004
March 2004 - rev. 2

ORPHEUS THREE

1